PARTS LIST FOR SANSUI SPEAKER SYSTEM

SANSUI

S-X950
S-X750

MINI COMPONENT SYSTEM

Organization of System Component

System Name	Amplifier	Tuner	CD Player	Cassette Deck	Speaker
MC-X750/X750L	A-X750	T-X950/X950L	CD-X950	D-X950	S-X750
MC-X950/X950L	A-X950	T-X950/X950L	CD-X950	D-X950	S-X950

SPECIFICATIONS

<S-X950>

Speakers .....3-way 3-speaker system
Woofer .....150 mm (5-15/16") Cone-type
Tweeter .....66 mm (2-5/8") Cone-type
Super Tweeter.....18 mm (3/4") Dome-type
Maximum input power.....50 watts
Maximum peak input power .....75 watts
Impedance .....6 ohms
Sensitivity.....90 dB/W (at 1 m)
Frequency range .....55 to 20,000 Hz (in normal listening room)
Crossover frequency.....5 kHz, 10 kHz
Dimensions .....190 mm (7-1/2") W
380 mm (14-15/16") H
247 mm (9-3/4") D
Weight.....5.1 kg (11.2 lbs) net
11.5 kg (25.4 lbs) twin packed

* Design and specifications subject to changes without notice for improvements.

<S-X750>

Speakers .....2-way 2-speaker system
Woofer .....150 mm (5-15/16") Cone-type
Tweeter .....25 mm (1") Dome-type
Maximum input power.....50 watts
Maximum peak input power .....75 watts
Impedance .....6 ohms
Sensitivity.....88 dB/W (at 1 m)
Frequency range .....50 to 20,000 Hz (in normal listening room)
Crossover frequency.....3 kHz
Dimensions .....190 mm (7-1/2") W
380 mm (15") H
247 mm (9-3/4") D
Weight.....5.0 kg (11.0 lbs) net
12 kg (26.5 lbs) twin packed

* Design and specifications subject to changes without notice for improvements.

1. PARTS LOCATION & PARTS LIST

1-1. S-X950

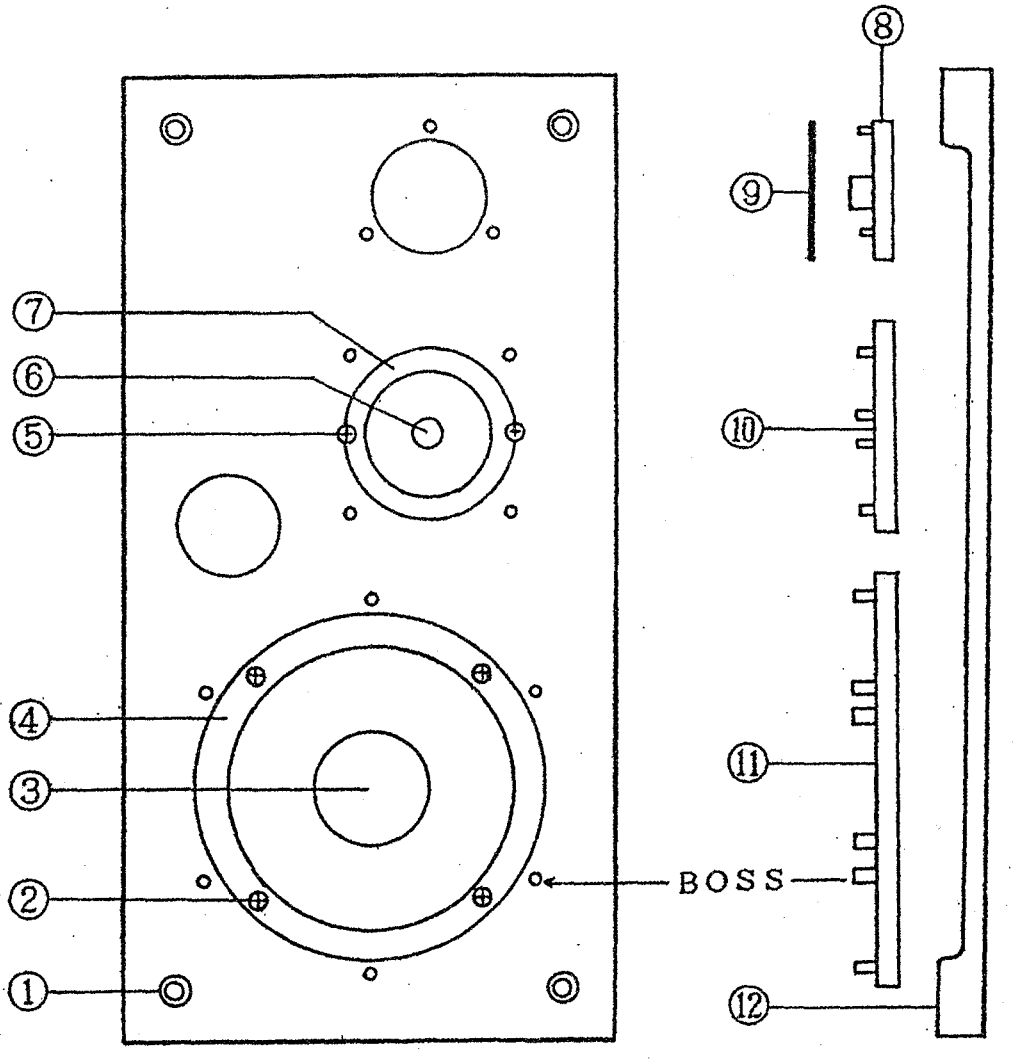

Parts List

Parts No.	Stock No.	Description
1	14724100	Grill Catch(black)
	14758300	Grill Catch(brown)
2	14728700	Pan Head Tpping Screw,4×16
3	14796000	Woofer,W-319V
4	14760300	Paking,Woofer
5	14728700	Pan Head Tapping Screw,4×16
6	14749900	Tweeter,T-271V
7	14757600	Packing,Tweeter
8	14793700	Supper Tweeter Assy T-273 Assy(black)
8	14793800	Supper Tweeter Assy T-273 Assy(brown)
9	14757700	Packing,Supper Tweeter
10	14756400	Tweeter Cover Assy(black)
	14756500	Tweeter Cover Assy(brown)
11	14756200	Woofer Cover Assy(black)
	14756300	Woofer Cover Assy(brown)
12	14756000	Front Grill Assy(black)
	14756100	Front Grill Assy(brown)

1-2. S-X750

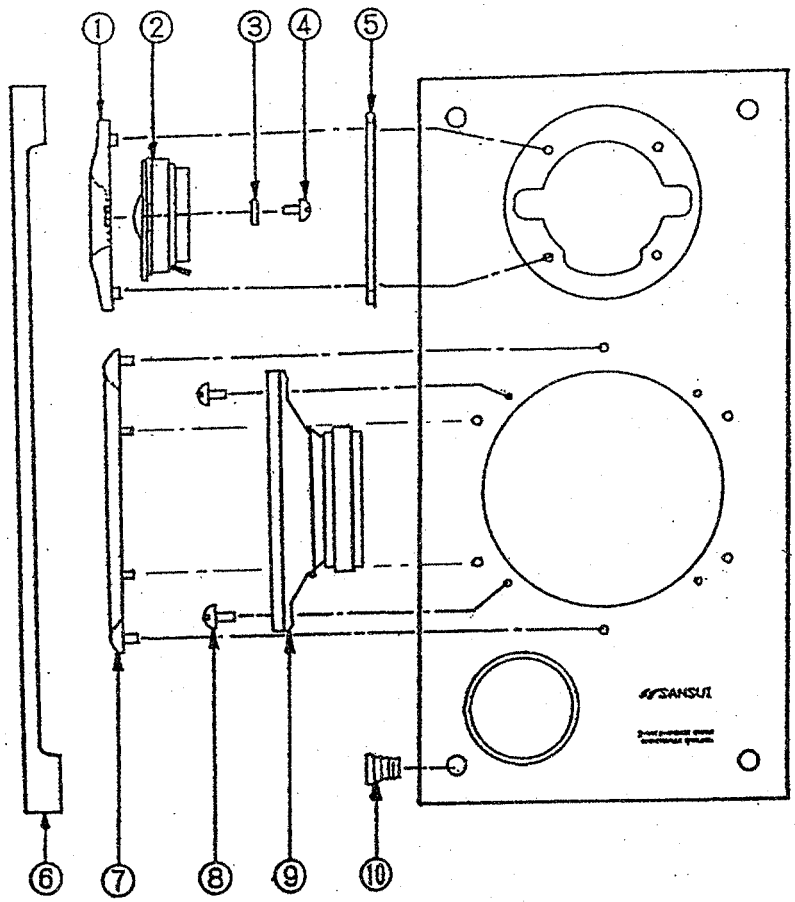

Parts List

Parts No.	Stock No.	Description
1	14794100	Tweeter Baffle Cover Assy (black)
	14794200	Tweeter Baffle Cover Assy (brown)
2	14749800	Tweeter Unit,T-270
3	14747800	Plastic Washer
4	13286000	Screw,4×8
5	14754500	Cushion ,Tweeter Cover
6	14756000	Front Grill Assy(black)
	14756100	Front Grill Assy(brown)

Parts No.	Stock No.	Description
7	14756200	Woofer Cover Assy(black)
	14756300	Woofer Cover Assy(brown)
8	14650300	Screw,M4×20
9	14749600	Woofer Unit,W-319V
10	14724100	Grill Catch(black)
	14758300	Grill Catch(brownn)

2. CROSSOVER NETWORK

<S-X950>

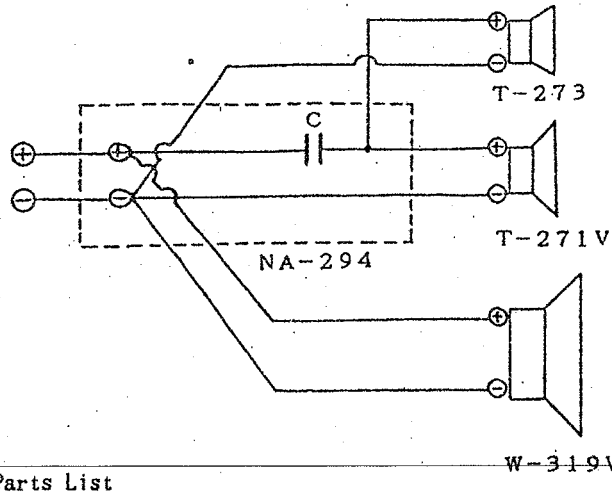

<S-X750>

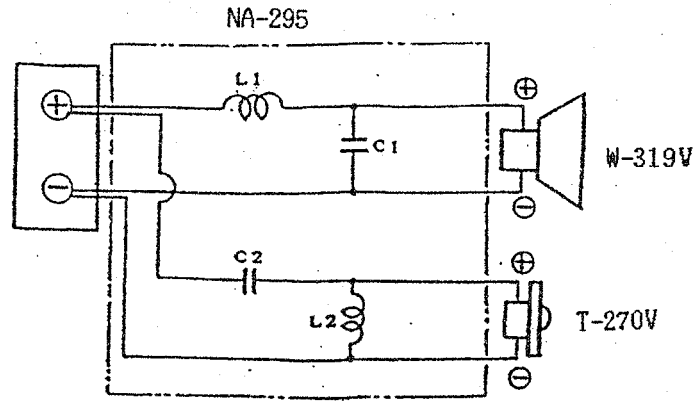

Parts List

Parts No.	Stock No.	Description
C	49634300	1.5uV 50V Bipolar Capacitor
	14708100	2P Push Terminal

Parts List

Parts No.	Stock No.	Description
C1	49634800	10uF 50V Bipolar Capacitor
C2	49634600	4.7uF 50V Bipolar Capacitor
L1	--------	0.82mH Inductor
L2	--------	0.47mH Inductor
	14708100	2P Terminal

3. PACKING PARTS LIST

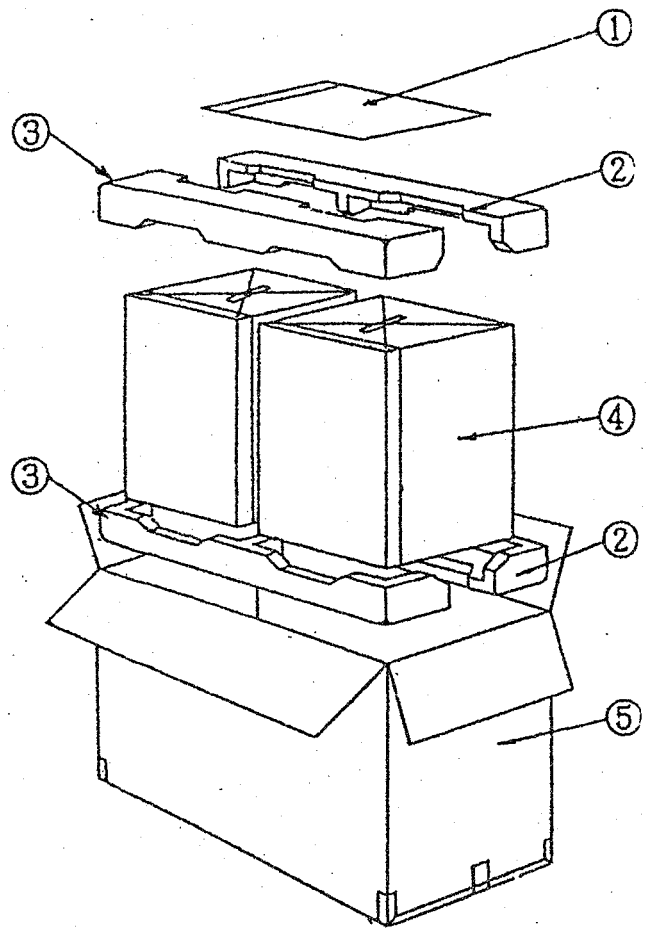

<S-X950>

Packing & Accessory List

Parts No.	Stock No.	Description
1	14621600	Speaker Cord
2	14751100	Styrofoam Packing(rear)
3	14751000	Styrofoam Packing(front)
4	14758600	Vinyl Bag
5	14779100	Carton Case(black)
	14796600	Carton Case(brown)

<S-X750>

Packing & Accessory List

Parts No.	Stock No.	Description
1	14621600	Speaker Cord
2	14751100	Styrofoam Packing(rear)
3	14751000	Styrofoam Packing(front)
4	14758600	Vinyl Bag
5	14773500	Carton Case(black)
	14796700	Carton Case(brown)

4. REPLACEMENT OF MAIN PARTS (Refer to Fig. A, B&C)

A. Woofer

1. Remove the front grill assy.
2. Gently insert a wide minus driver between the cabinet and a woofer cover then lift up the driver,to pull out the woofer cover fixed by 6 boss from the enclosure.
3. Remove the four screws to remove the woofer.

NOTE:
Apply a soft cloth between a driver and the cabinet.
Extra care must be taken not to scratch the cabinet

B.Tweeter (For S-X750)

1. Remove the front grill assy.
2. Remove the woofer.
3. Remove the two fixing screws from back side of tweeter through fixing hole of the woofer.(See Fig. B)
4. Pull out the tweeter toward rear side.

C.Tweeter (For S-X950)

1. Remove the front grill assy.
2. Gently insert a wide minus driver between the cabinet and a tweeter cover then lift up the driver,to pull out the tweefer cover fixed by 4 boss from the the enclosure.
3. Remove the two screws to remove the tweeter.

D. Supper Tweeter Assy (S-X950 Only)

1. Remove the front grill assy.
2. Gentry insert a wide minus driver between the cabibinet and a supper tweeter assy then lift up the doriver to pull out the supper tweeter assy from the encosure.

NOTE:
Apply a soft cloth between a driver and the cabinet.
Extra care must be taken not to scratch the cabinet.

E. Speaker Terminal

1. Remove the front grill Assy.
2. Remove the woofer.
3. Beat out speaker terminal with large driver from rear side of it through fixing hole of the woofer.

Fig. A

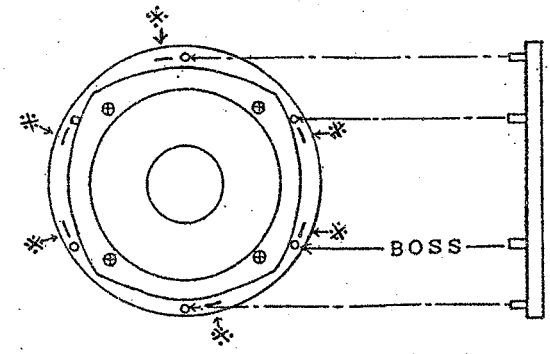

* mark is set position of driver

Fig. B

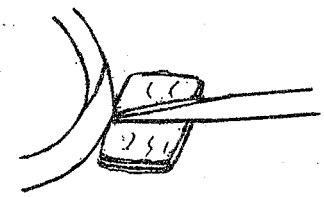

Fig. C

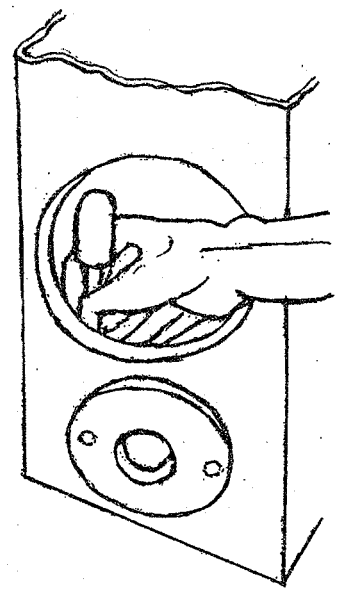

SANSUI

SANSUI ELECTRIC CO., LTD.: New River Bldg. 10-14, Shinkawa 1-chome, Chuo-ku, Tokyo 104, Japan
PHONE: (03) 5566-1024 / FAX: 03-5566-1027 (International Division)
SANSUI USA INC.: 1290 Wall Street West, Lyndhurst, New Jersey 07071 U.S.A.
17150 South Margay Ave. Carson, California 90746 U.S.A.
SANSUI DEUTSCHLAND G.M.B.H.: Paul-Ehrlich-Strasse 8, 6074 Rödermark 2, F. R. Germany
山水電気株式会社 東京都中央区新川1-10-14 (〒104)

(SM2-310) Printed in Japan(1992.01.W) 社内印刷のため，在庫は持ちません.